

N




MODEL	DESCRIPTION
184-515-1	Female Chassis Mount with Flange
184-058-1	Male Crimp RG58
184-258-1	Male Solder RG58
184-208-1	Male Solder RG8

PAL




MODEL	DESCRIPTION
188-750	Female Solder
197-020	Female to F-Male Adapter
198-005	Male to F-Female Adapter

RF Adapters

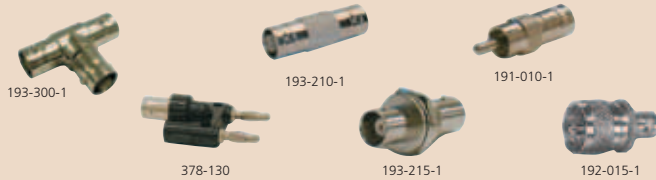

BNC FEMALE

MODEL	DESCRIPTION
193-300-1	BNC Female to 2 BNC Female
378-130	BNC Female to Banana Plugs
193-210-1	BNC Female to BNC Female
193-210-10	BNC Female to BNC Female, Pkg/10
193-215-1	BNC Female to BNC Female Chassis Bulkhead
193-215-10	BNC Female to BNC Female Chassis Bulkhead, Pkg/10
197-010-1	BNC Female to F Male
194-005-1	BNC Female to N Male
191-010-1	BNC Female to RCA Male
191-010-10	BNC Female to RCA Male, Pkg/10
195-005-1	BNC Female to TNC Male
192-015-1	BNC Female to UHF Male

 

F

MODEL	DESCRIPTION
191-005-1	F Female to RCA Male
191-005-10	F Female to RCA Male, Pkg/10
197-005-1	F Male to RCA Female
362-186-10	F Female to RCA Female Adapter, Chassis Mount Gold, Pkg/10

TNC



MODEL	DESCRIPTION
185-520-1	Female Chassis RG58
194-058-1	Male Crimp RG58
194-059-1	Male Crimp RG59
194-158-1	Male Solder RG58

Terminators



MODEL	DESCRIPTION
183-850-10	BNC Male 50Ω, Pkg/10
183-875	BNC Male 75Ω
183-875-10	BNC Male 75Ω, Pkg/10
OV633-10	RG59 Terminator 75Ω, Pkg/10

BNC MALE



MODEL	DESCRIPTION
193-005-1	BNC Male to F Female
193-005-10	BNC Male to F Female, Pkg/10
193-010-1	BNC Male to RCA Female
193-010-10	BNC Male to RCA Female, Pkg/10
193-011-1	BNC Male to RCA Female Gold
193-011-10	BNC Male to RCA Female Gold, Pkg/10
193-015-1	BNC Male to UHF Female
193-025-1	BNC Male to N Female
193-200-1	BNC Male to BNC Male
193-205-1	BNC Male to BNC Female, R/A
193-305-1	BNC Male to 2 BNC Female
193-305-10	BNC Male to 2 BNC Female, Pkg/10
378-120	BNC Male to 2 Binding Posts



N

MODEL	DESCRIPTION
192-020-1	N Female to UHF Male
194-010-1	N Male to UHF Female
194-210-1	N Female to N Female

UHF

MODEL	DESCRIPTION
195-010-1	UHF Female to TNC Male

